


# ASSEMBLY INSTRUCTIONS

GALVANIZED STEEL (GVS) BASE  
WITH SECURITY STEM

(Single, double stack - combo and triple stack - combo)

- 1 Install 4 carriage bolts 1/2"-13 to three GALVANIZED BASES from bottom base. Then Insert CANTILEVER SECURITY STEM to top GALVANIZED BASE. Screw 4 hexagon jam nuts to 4 carriage bolts, but DO NOT TIGHTEN the bolts.
- 2 The leveling nuts will be used to adjust the pitch of the parasol canopy. The security stem may not be exactly 90° to create a level canopy. Adjustments should be made with the canopy as a reference point, not the security stem. Once the canopy is level, securely tighten all 4 hex jam nut with 3/4" wrench.

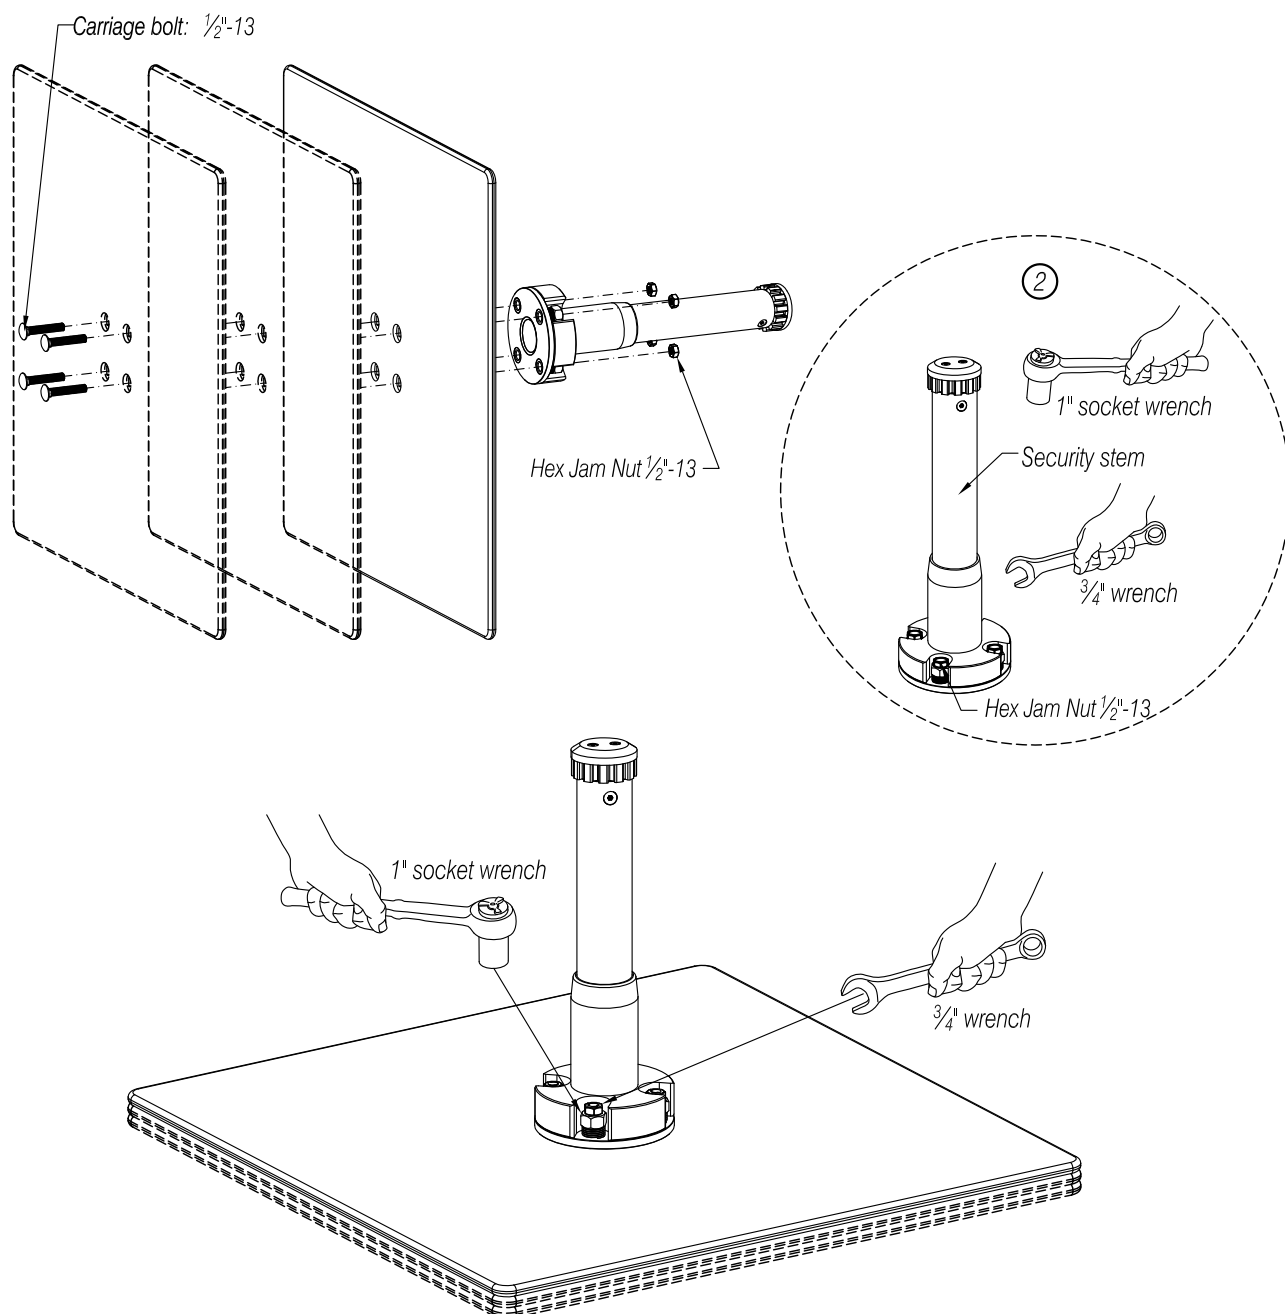

## global headquarters

2900 NW 35th Street  
Miami, FL 33142 USA  
Version date: 04/01/2013 - REV: C

t 305.634.5116  
f 305.634.5119

info@tuuci.com  
www.tuuci.com

**TUUCI**  
made in miami